

Gibtelecom

Emergency Panic Button

User Guide



The Emergency Button is a portable solution with integrated GSM mobile technology. Small enough to fit on a keyring or to be worn around the neck, it is ideal for the elderly, lone workers, people with dementia, etc.,

Features



Switching on and off

To turn on press and hold the power button for more than 2 seconds until the tracker vibrates. The yellow indicator will flash and the tracker will switch on.

To turn off press and hold the power button for more than 3 seconds until the tracker vibrates and the two indicators flash at the same time.

Charging your device

You can charge the device using the single magnetic contact cable or using the docking station with USB cable charging.



Simply place in the dock and a light will turn on to indicate the device is charging.

Making an SOS call



Press and hold down the SOS Button until it vibrates to trigger alert.



Your emergency contact will receive an SOS text message.



The system will call your emergency contacts one by one until the call is answered.



The person receiving the call must press 1 to establish the call and speak to the alarm user.

Receiving calls



Only authorised emergency contacts can call the panic button device.



The call will connect automatically after 3 rings.



To hang up press the SOS Button.

Looking after your device



Charge your device regularly. A battery warning is sent via SMS when it goes below 10%.



Although the device is water resistant do not clean with soap or chemicals as this may stop it from working. Do not shake violently.